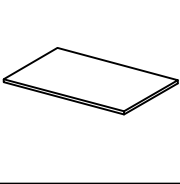
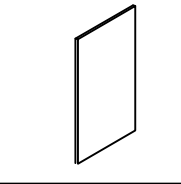
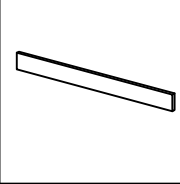
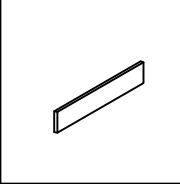
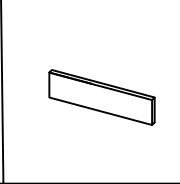
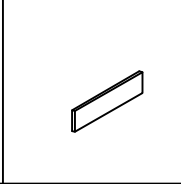
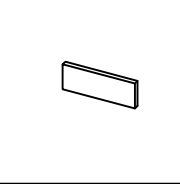
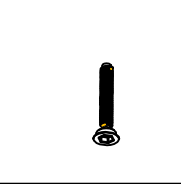


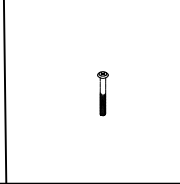
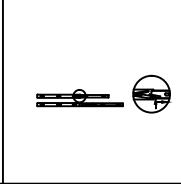


MONTÁŽNÝ NÁVOD NA **AVARD** GD5054

					
#1: 1ks	#2: 1ks	#3: 1ks	#4: 3ks	#5: 1ks	#6: 2ks
					
#7: 1ks	#8: 8ks	#9: 10ks	#10: 20ks	#11: 4ks	#12: 1ks
