


MONTE KOMODA 2D3S/140x100

Montážny návod / Montageanleitung / Mounting instruction / Инструкция сборки

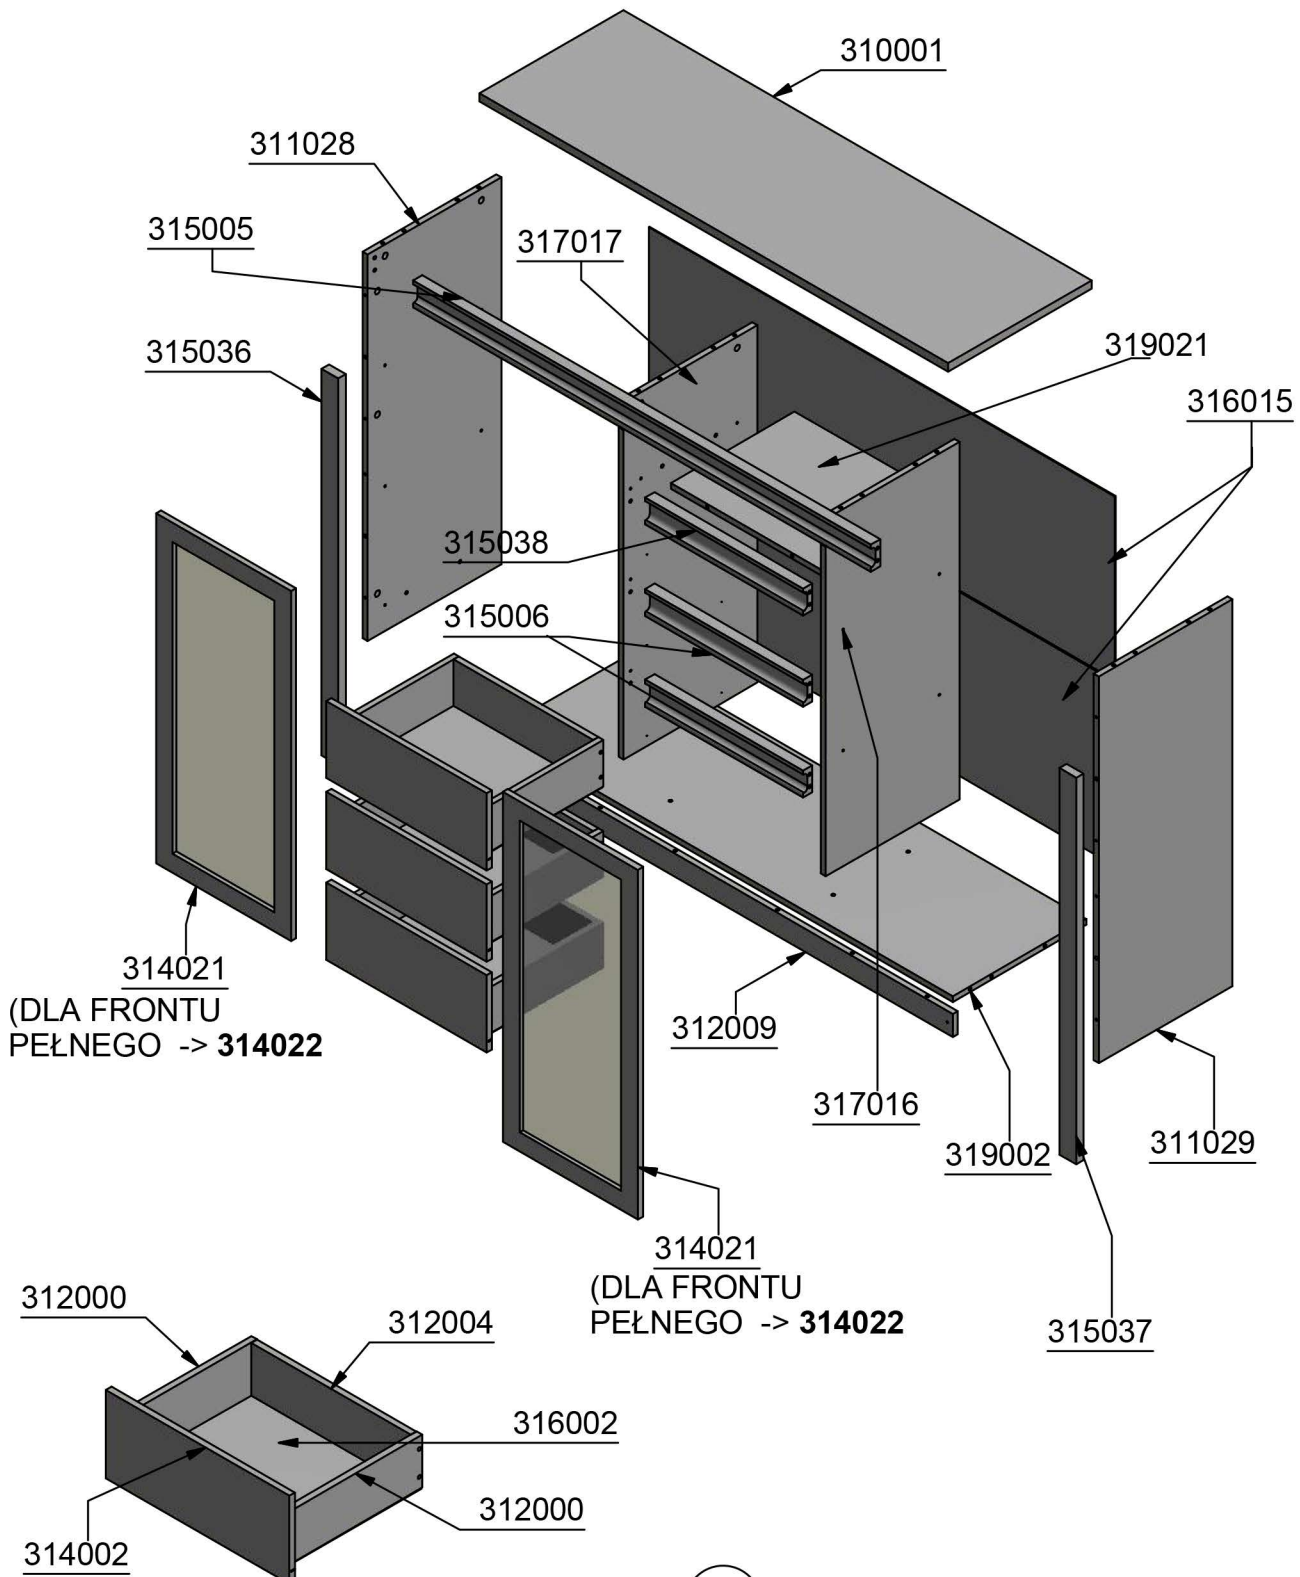


A x 42

(8x36)



B x 35

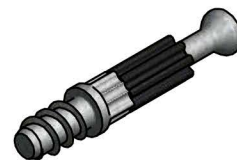

C x 35

(15x12)





D x 85




E x 3 kpl


F x 16

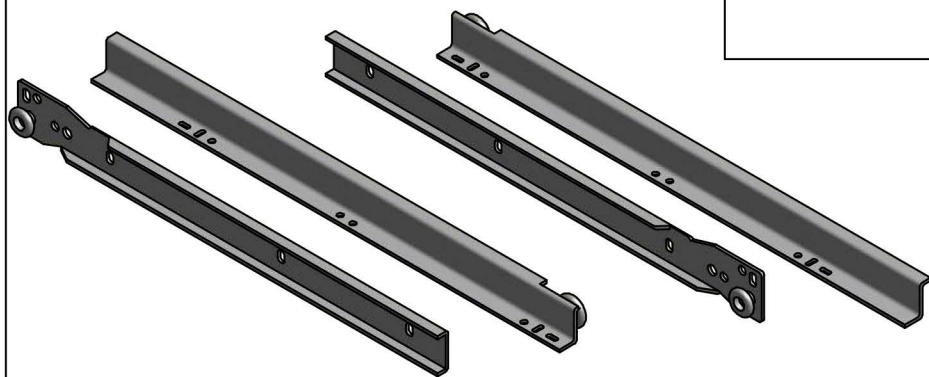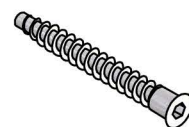

G x 4

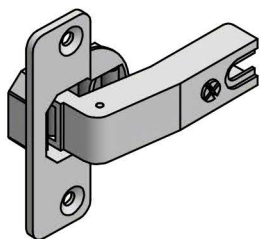


H x 4

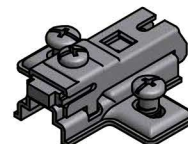

I x 16



J x 1

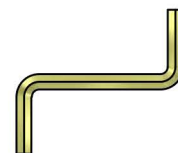

W1 x 18
(fi 3,5 x 13 USKB)

W2 x 8

B x 18
(fi 3,5 x 25 USKB)




W3 x 2



(fi 4 x 16 USKB)




W3 x 2
(fi 4 x 25 USKB)

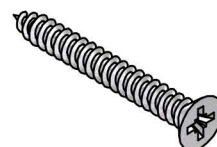


KROK 1

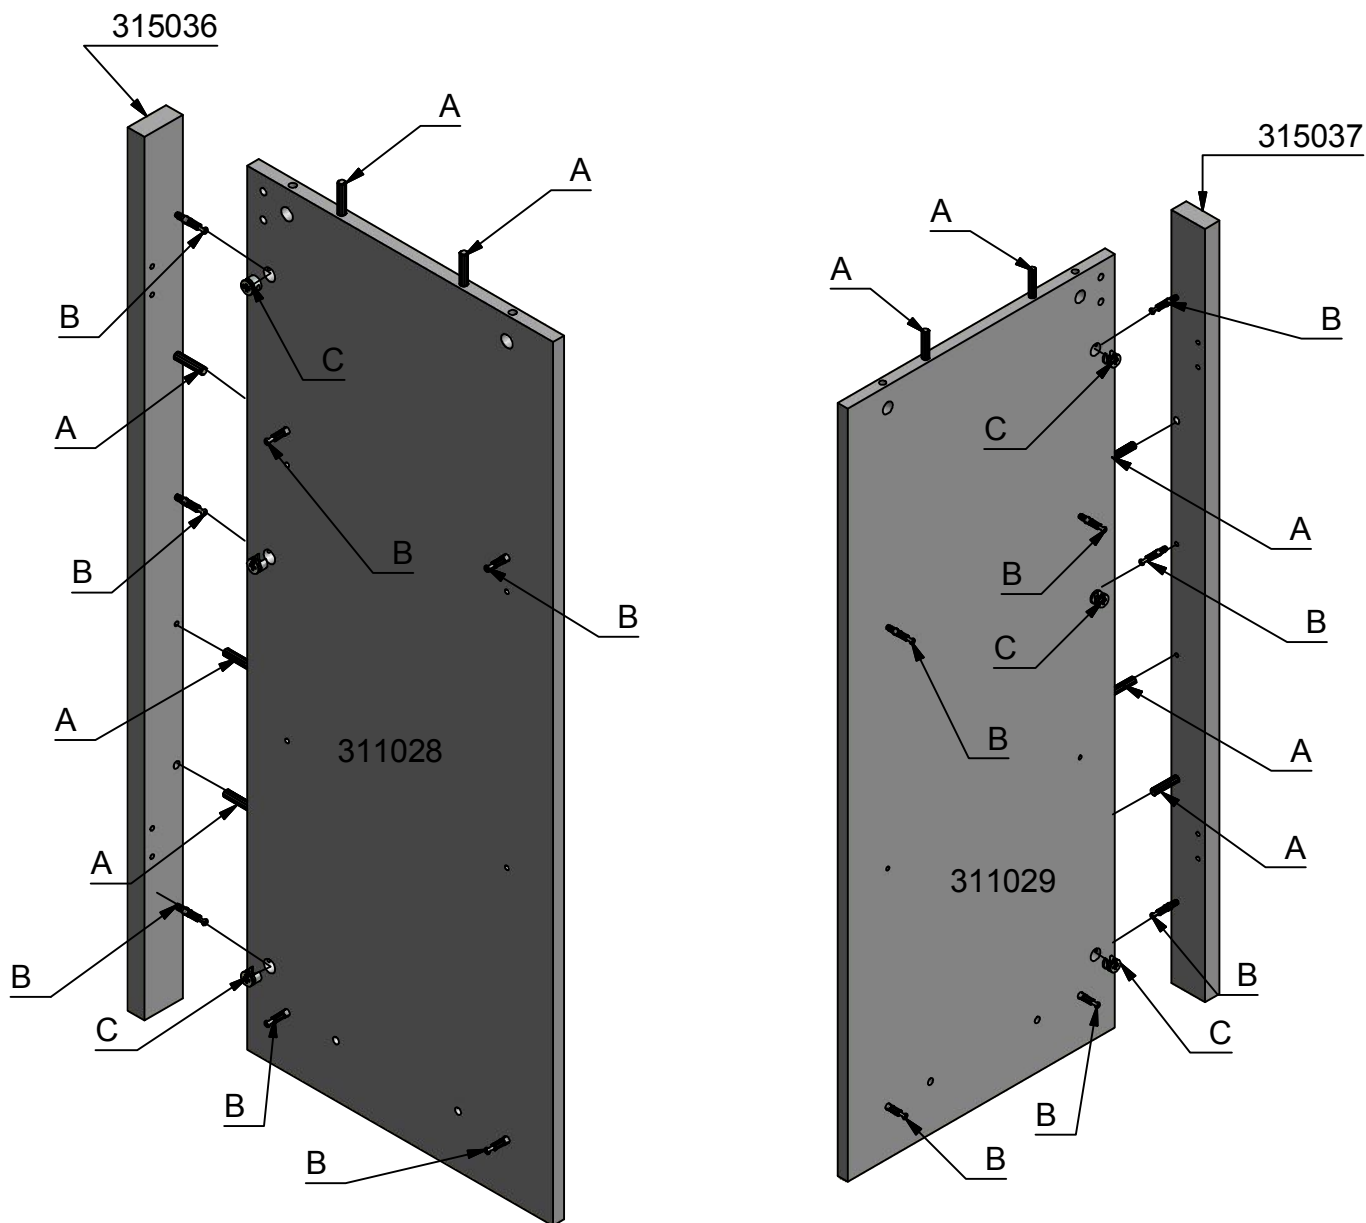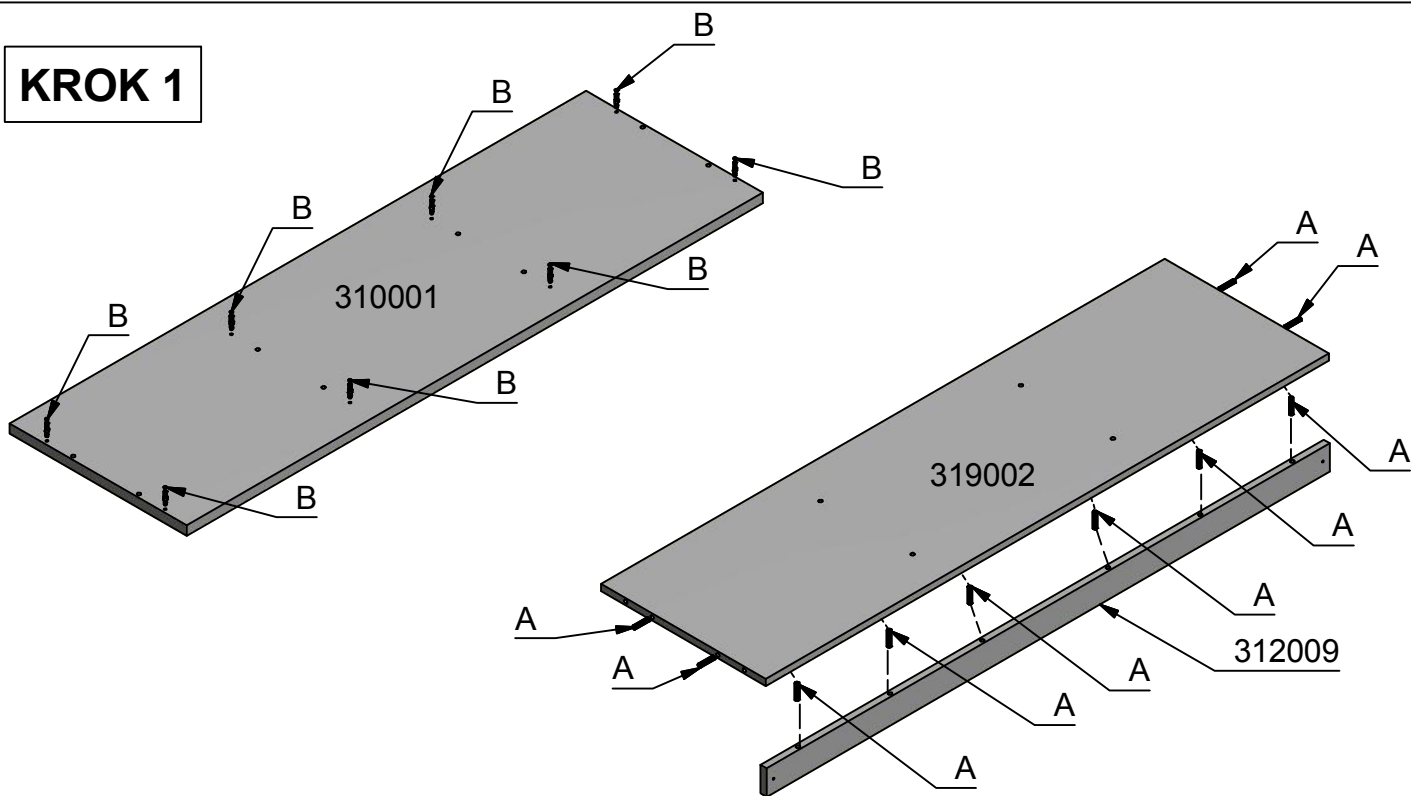


KROK 2

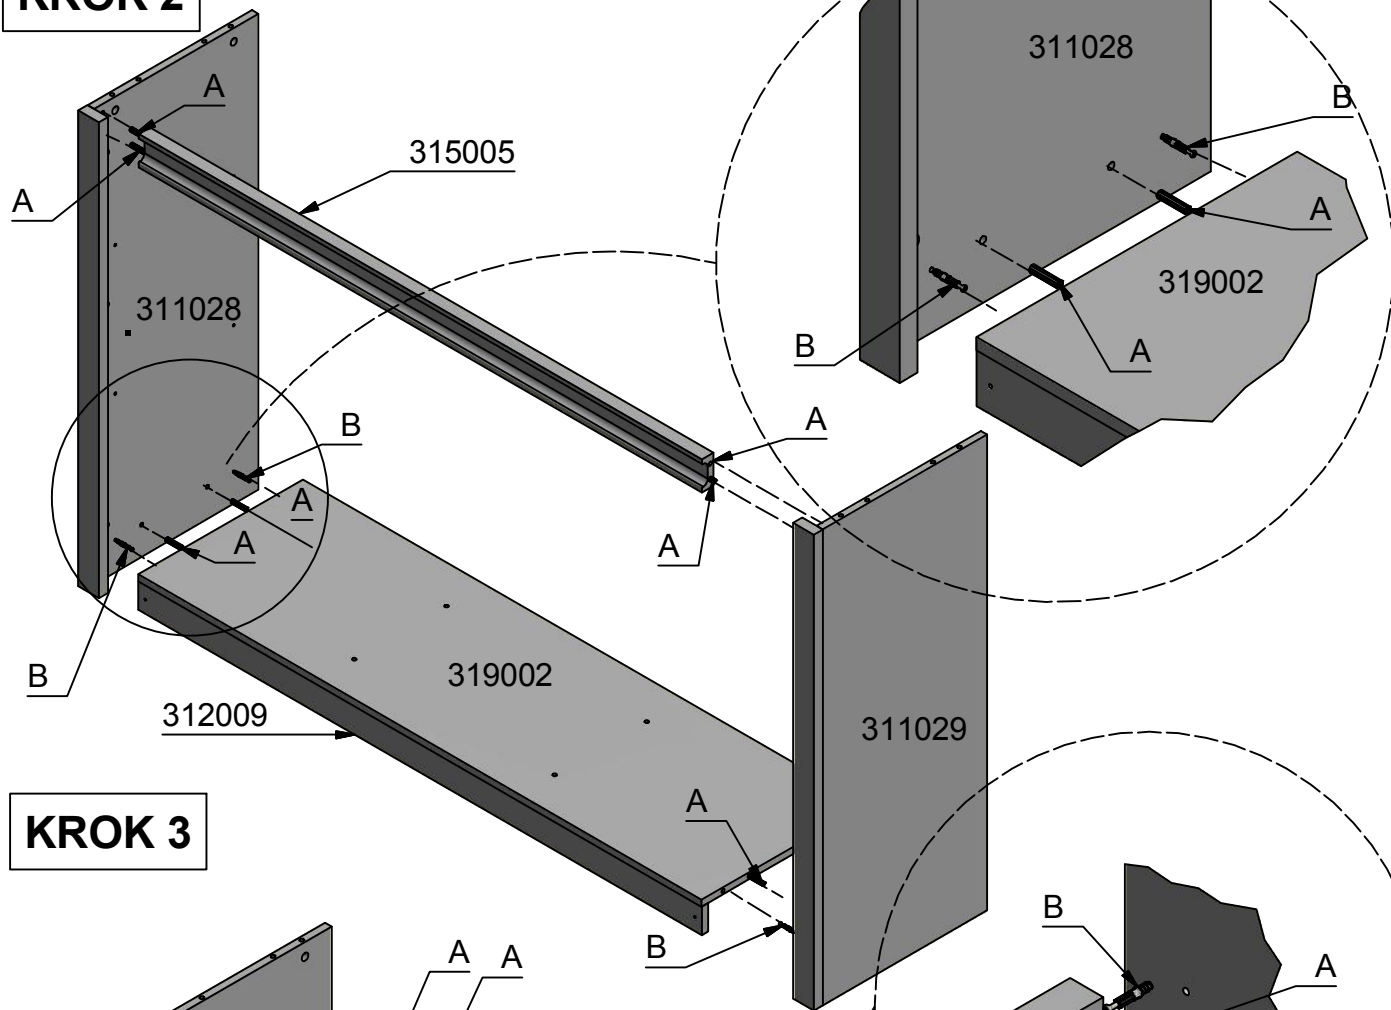


KROK 3

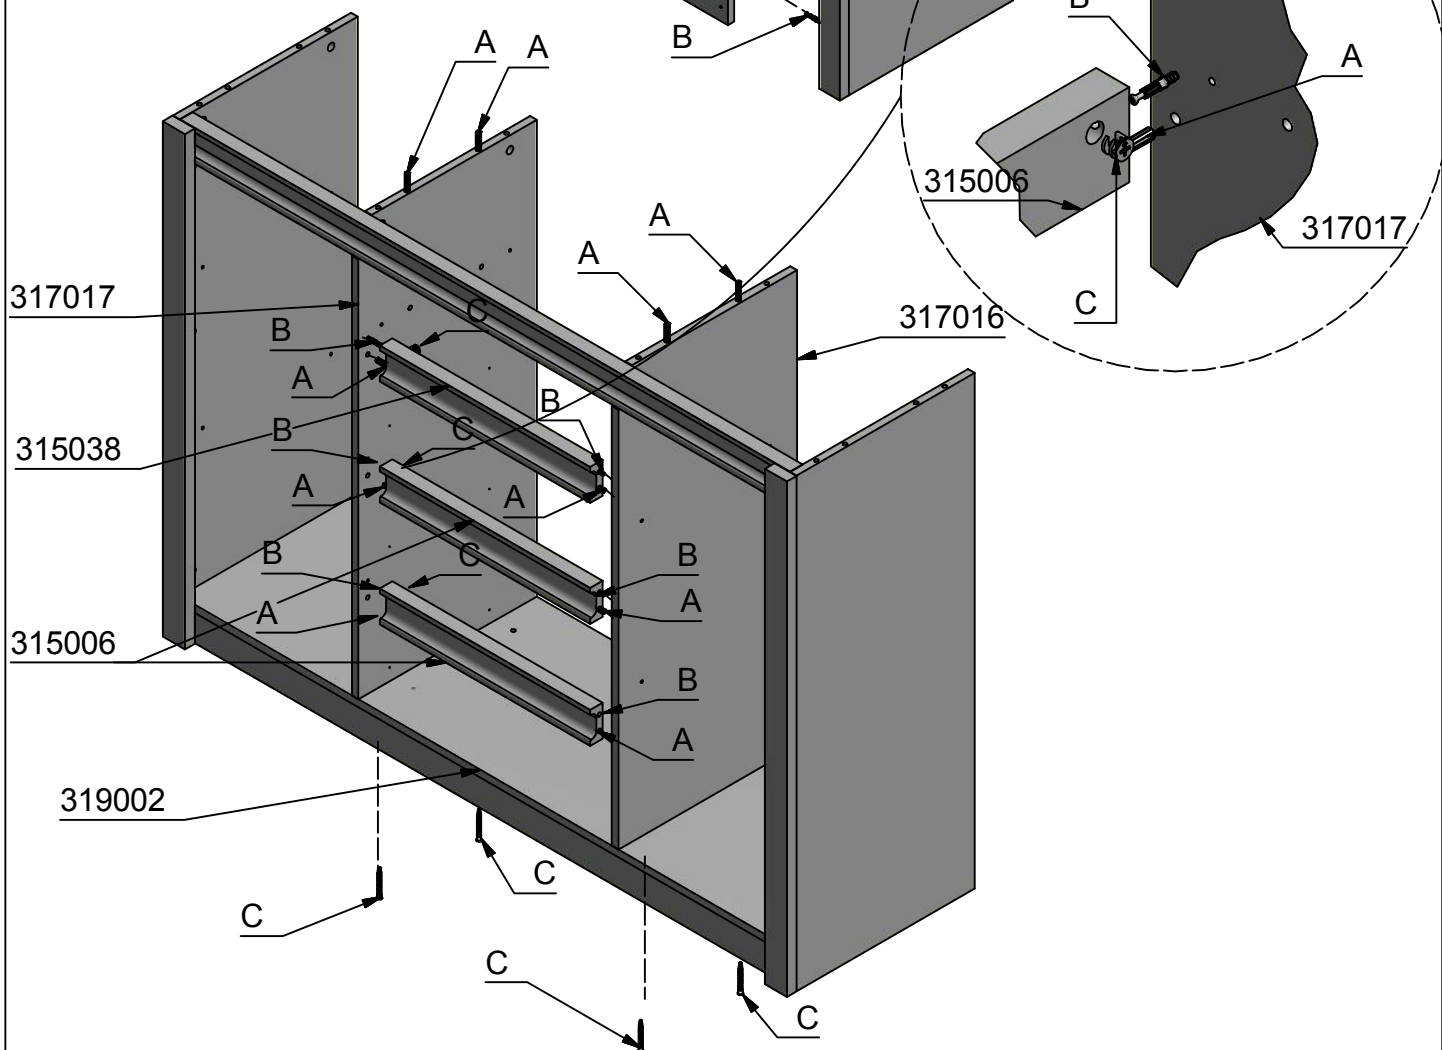


KROK 4

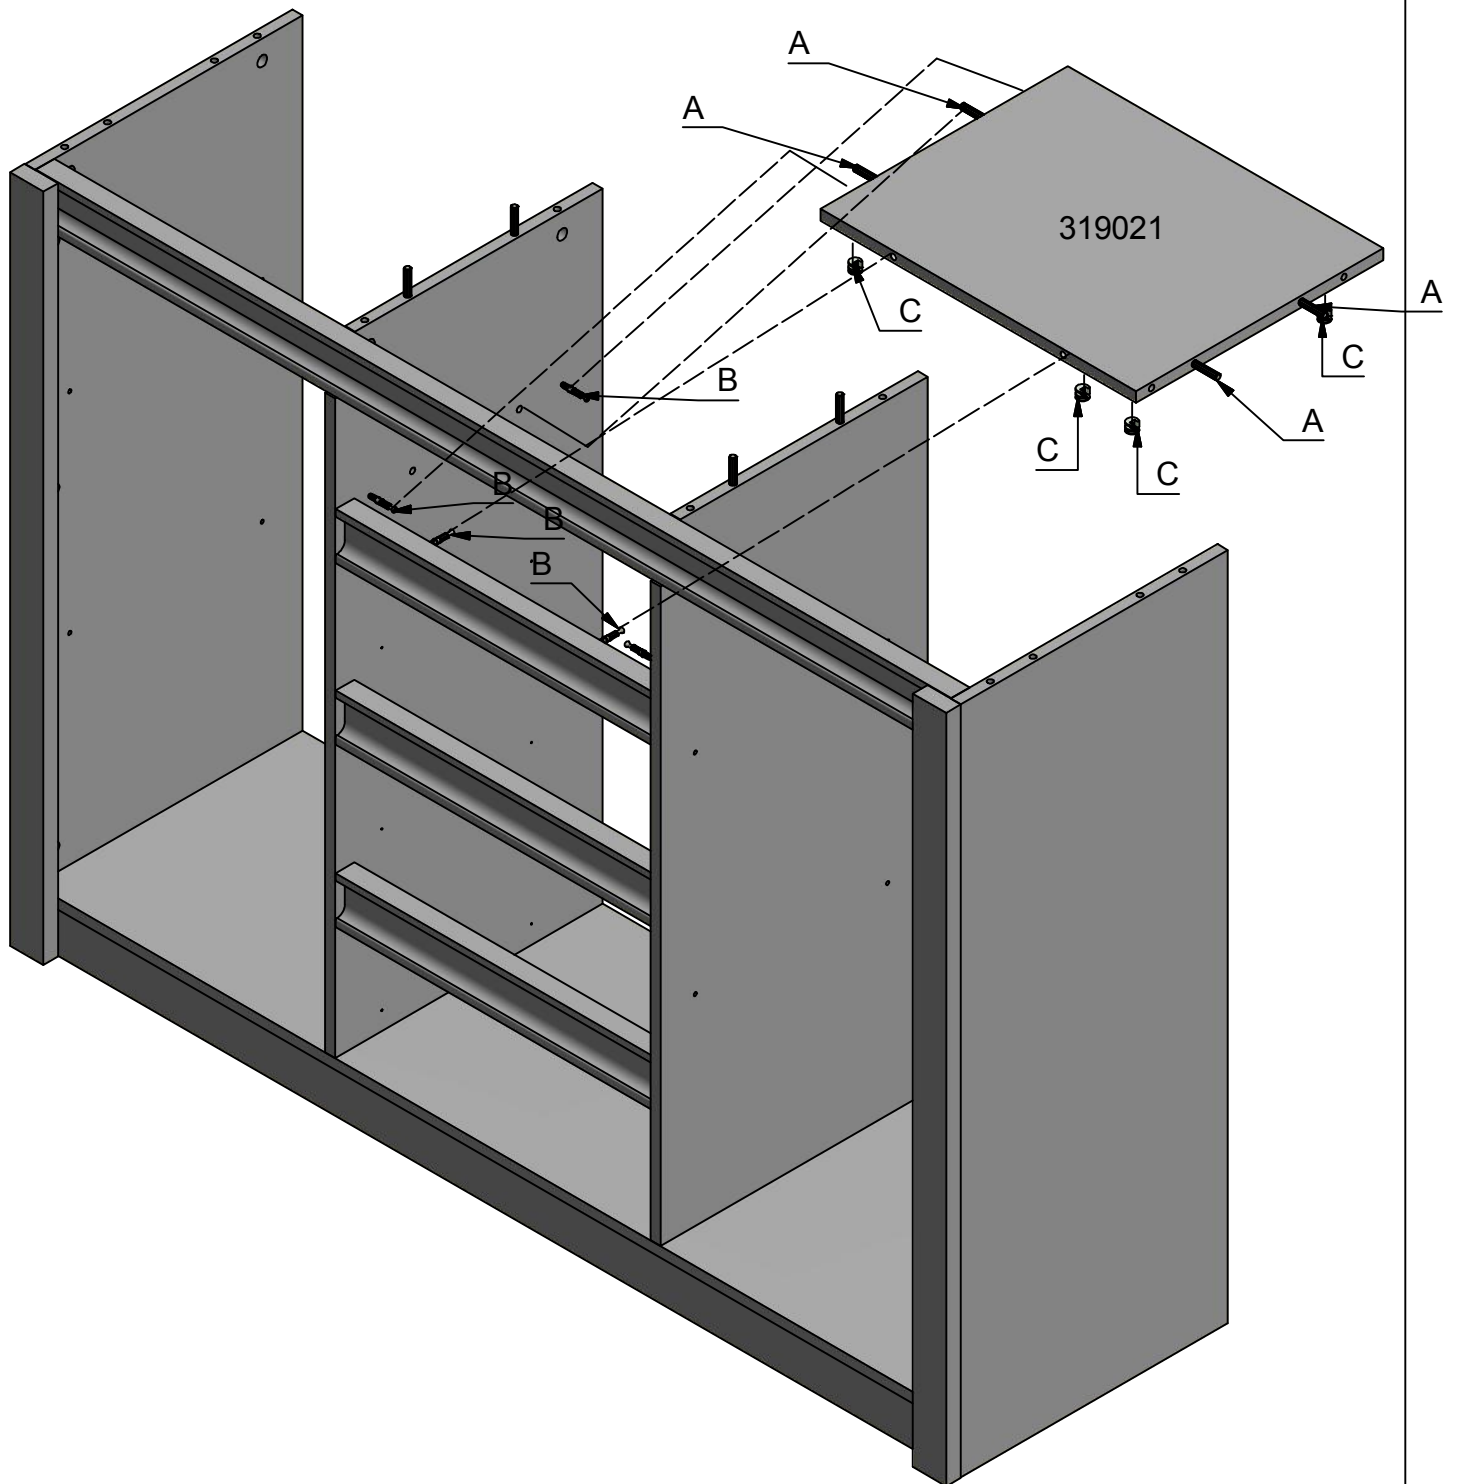


KROK 5

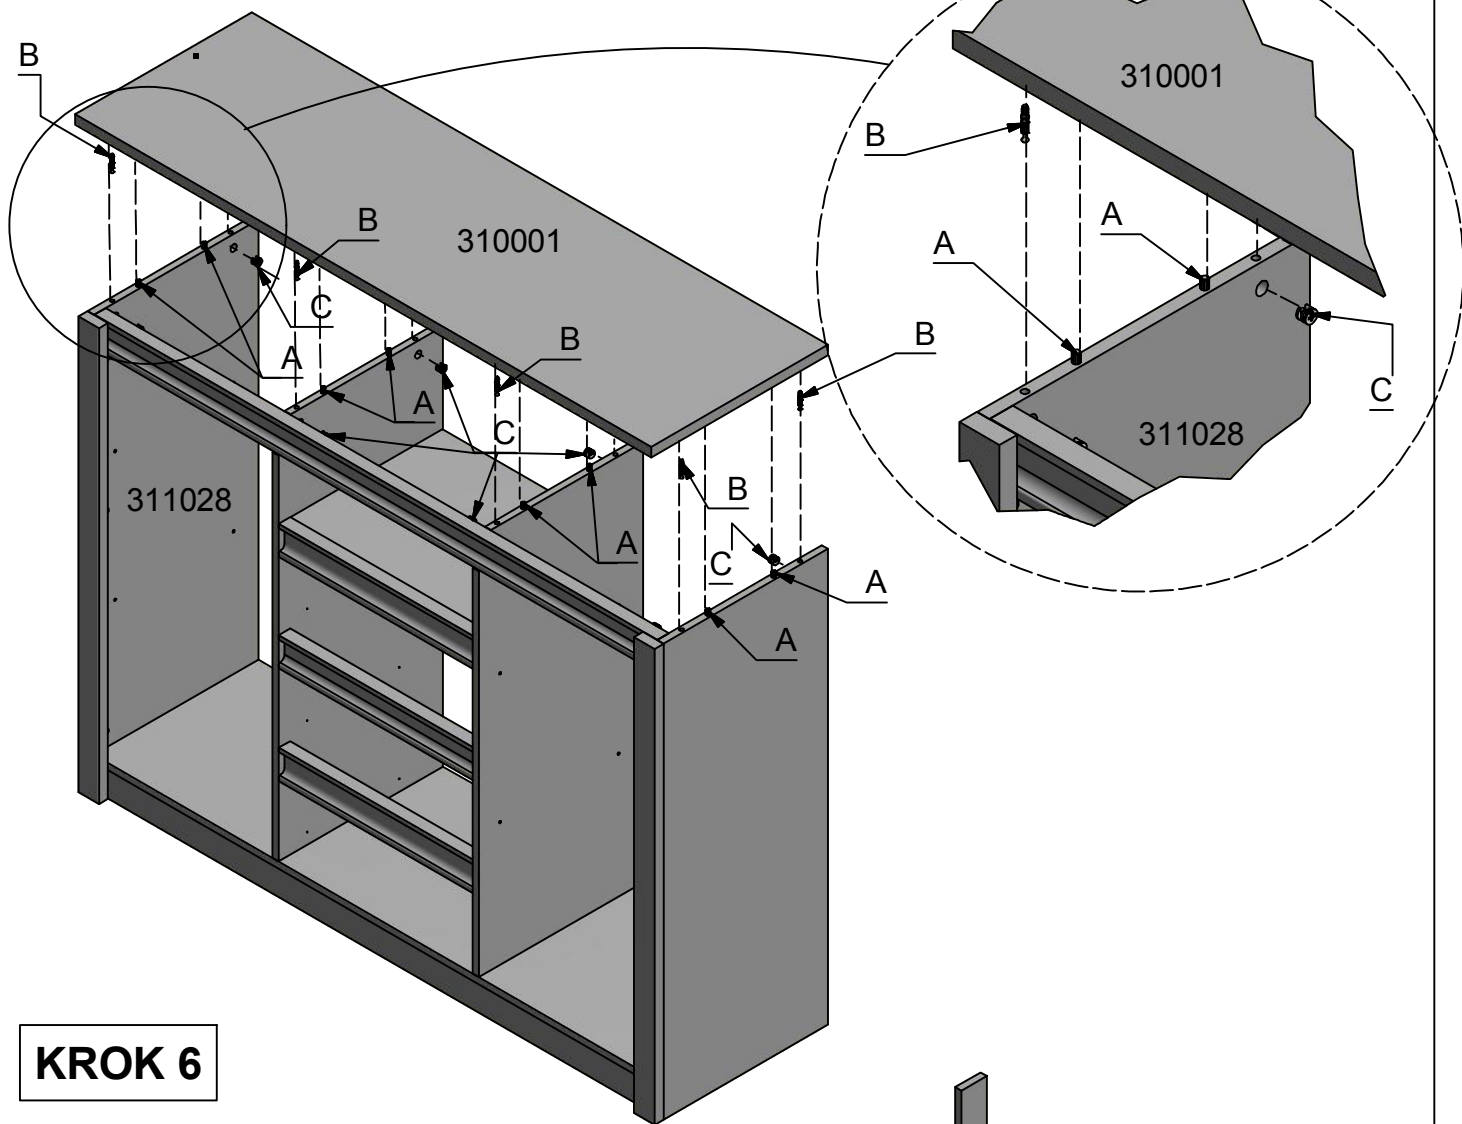


KROK 6

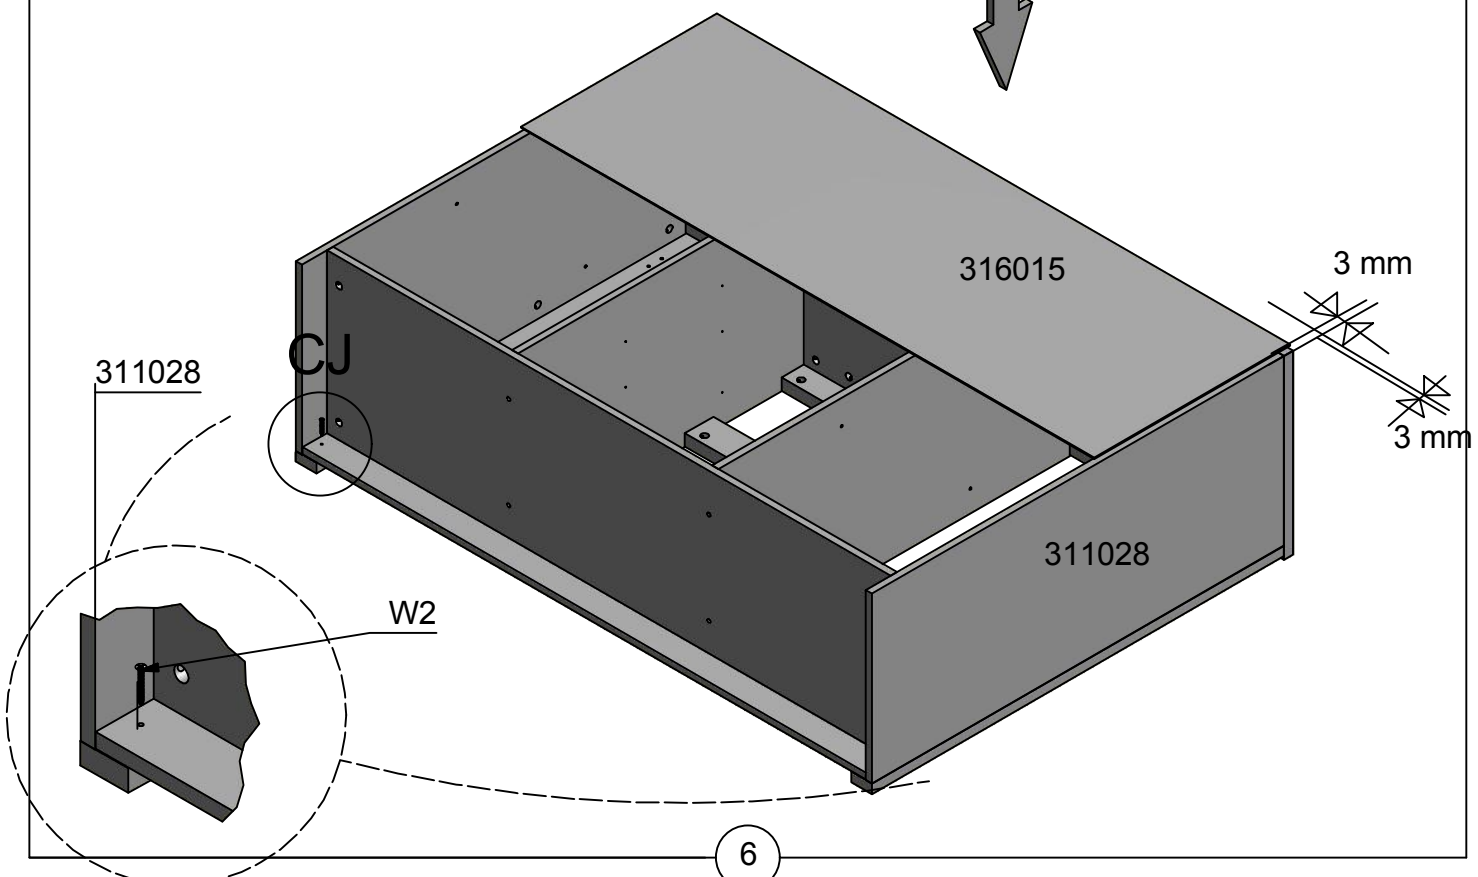


KROK 6

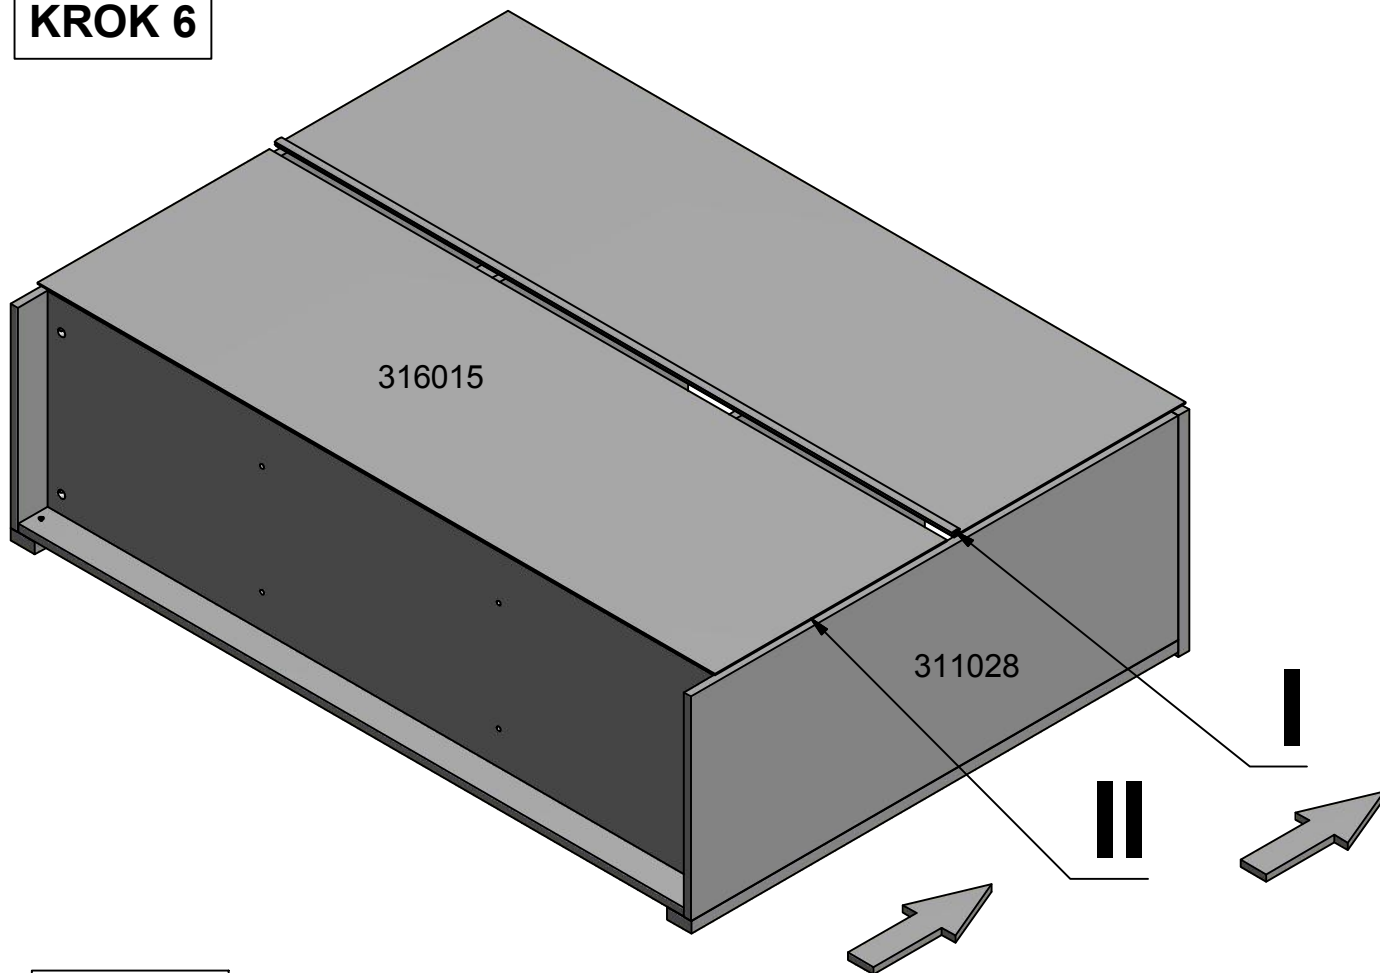

KROK 7

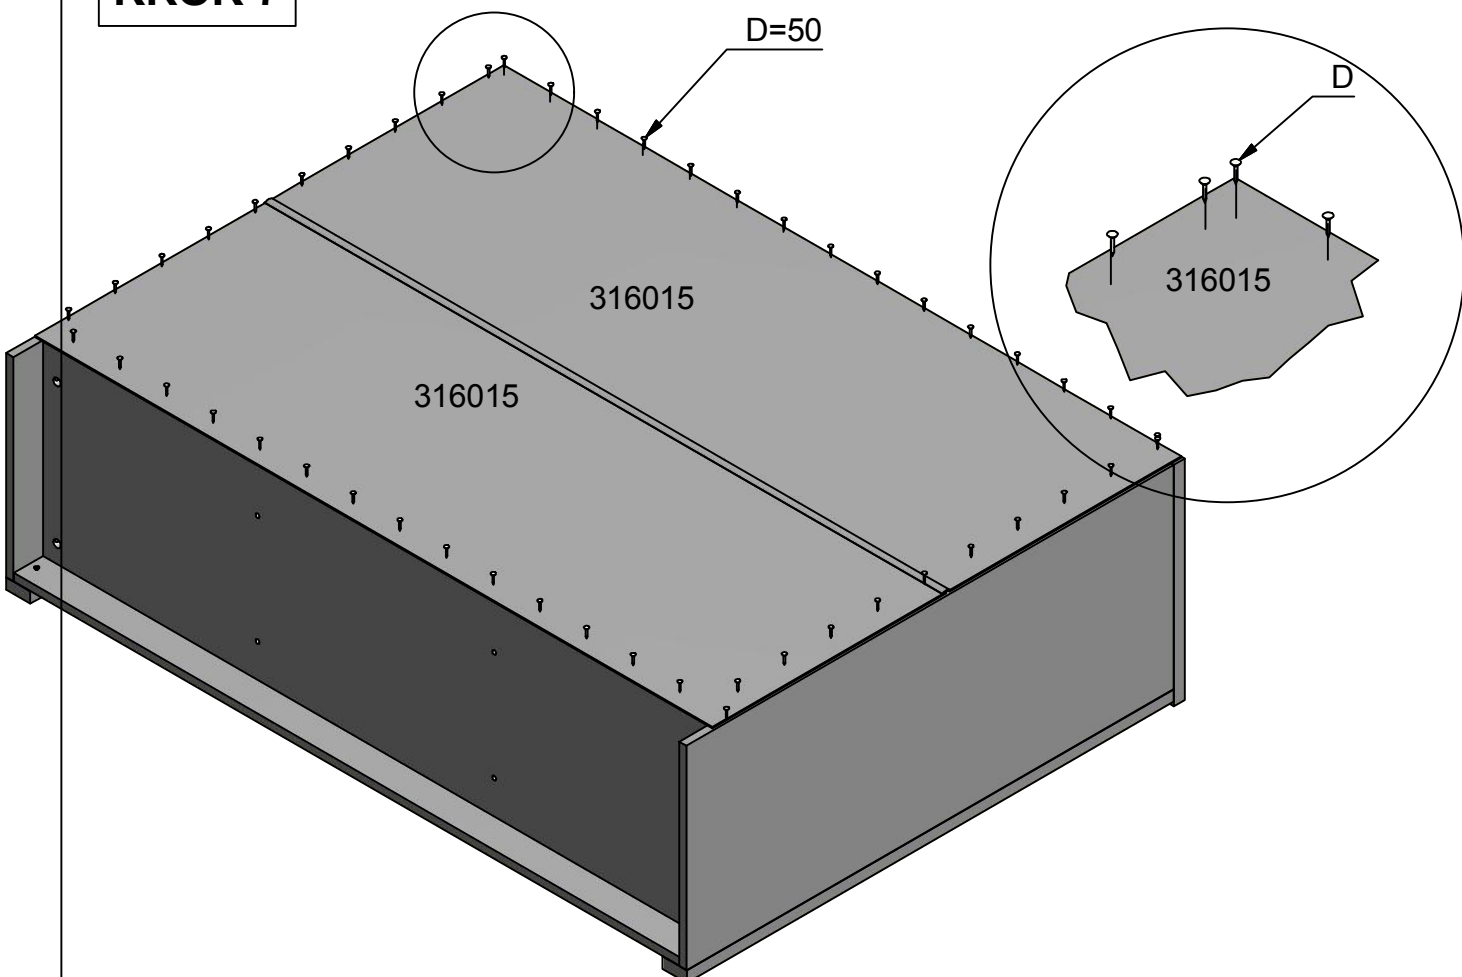

KROK 8

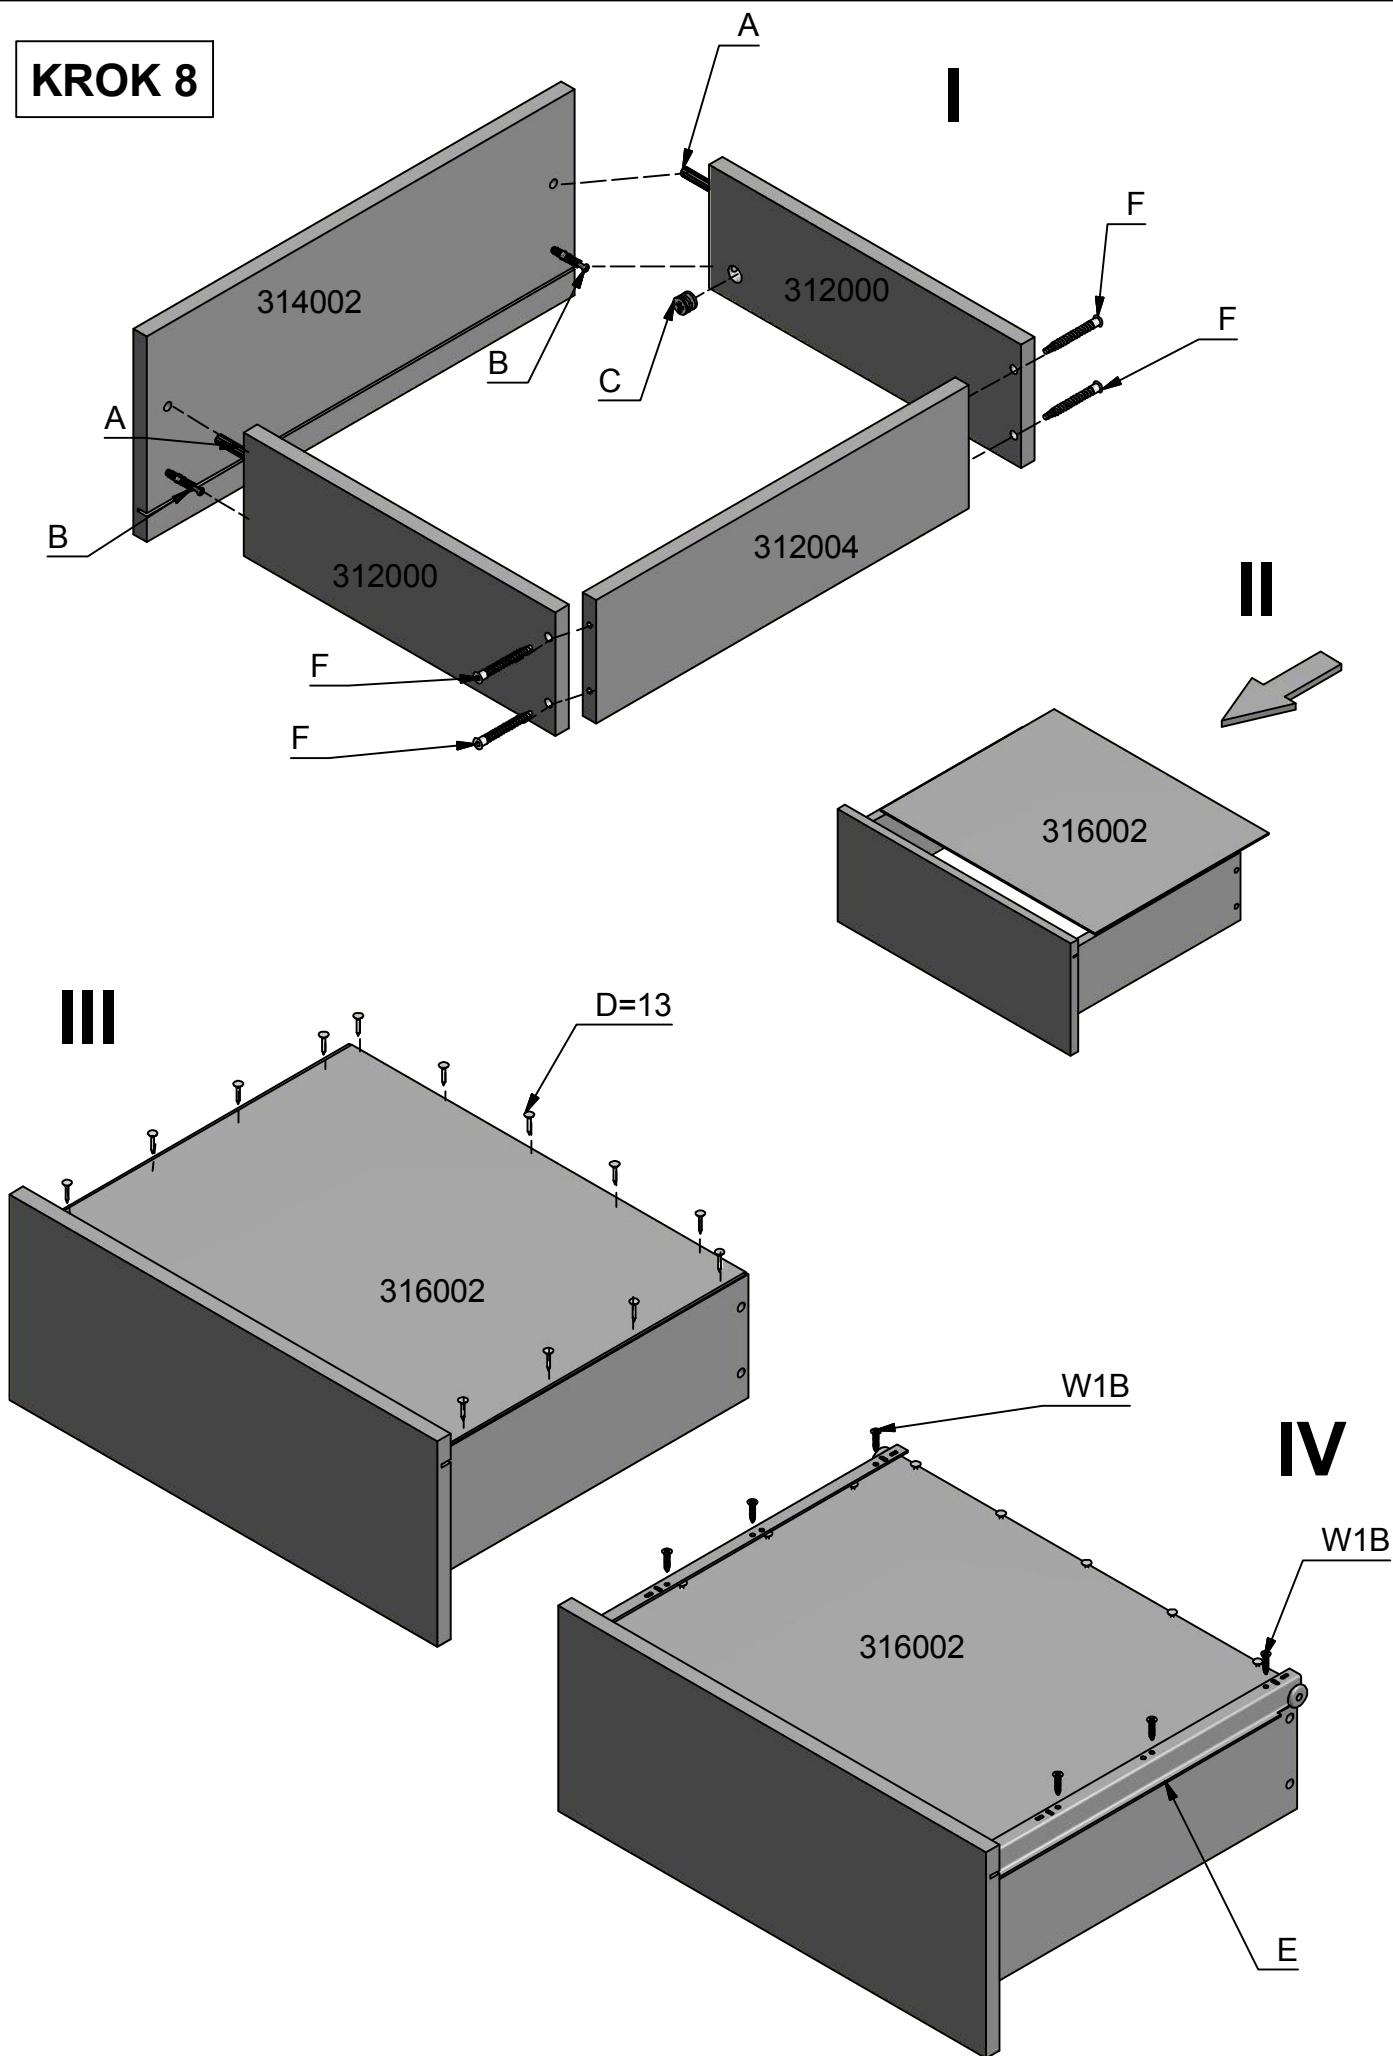


KROK 9

315036

317016


311028

317016

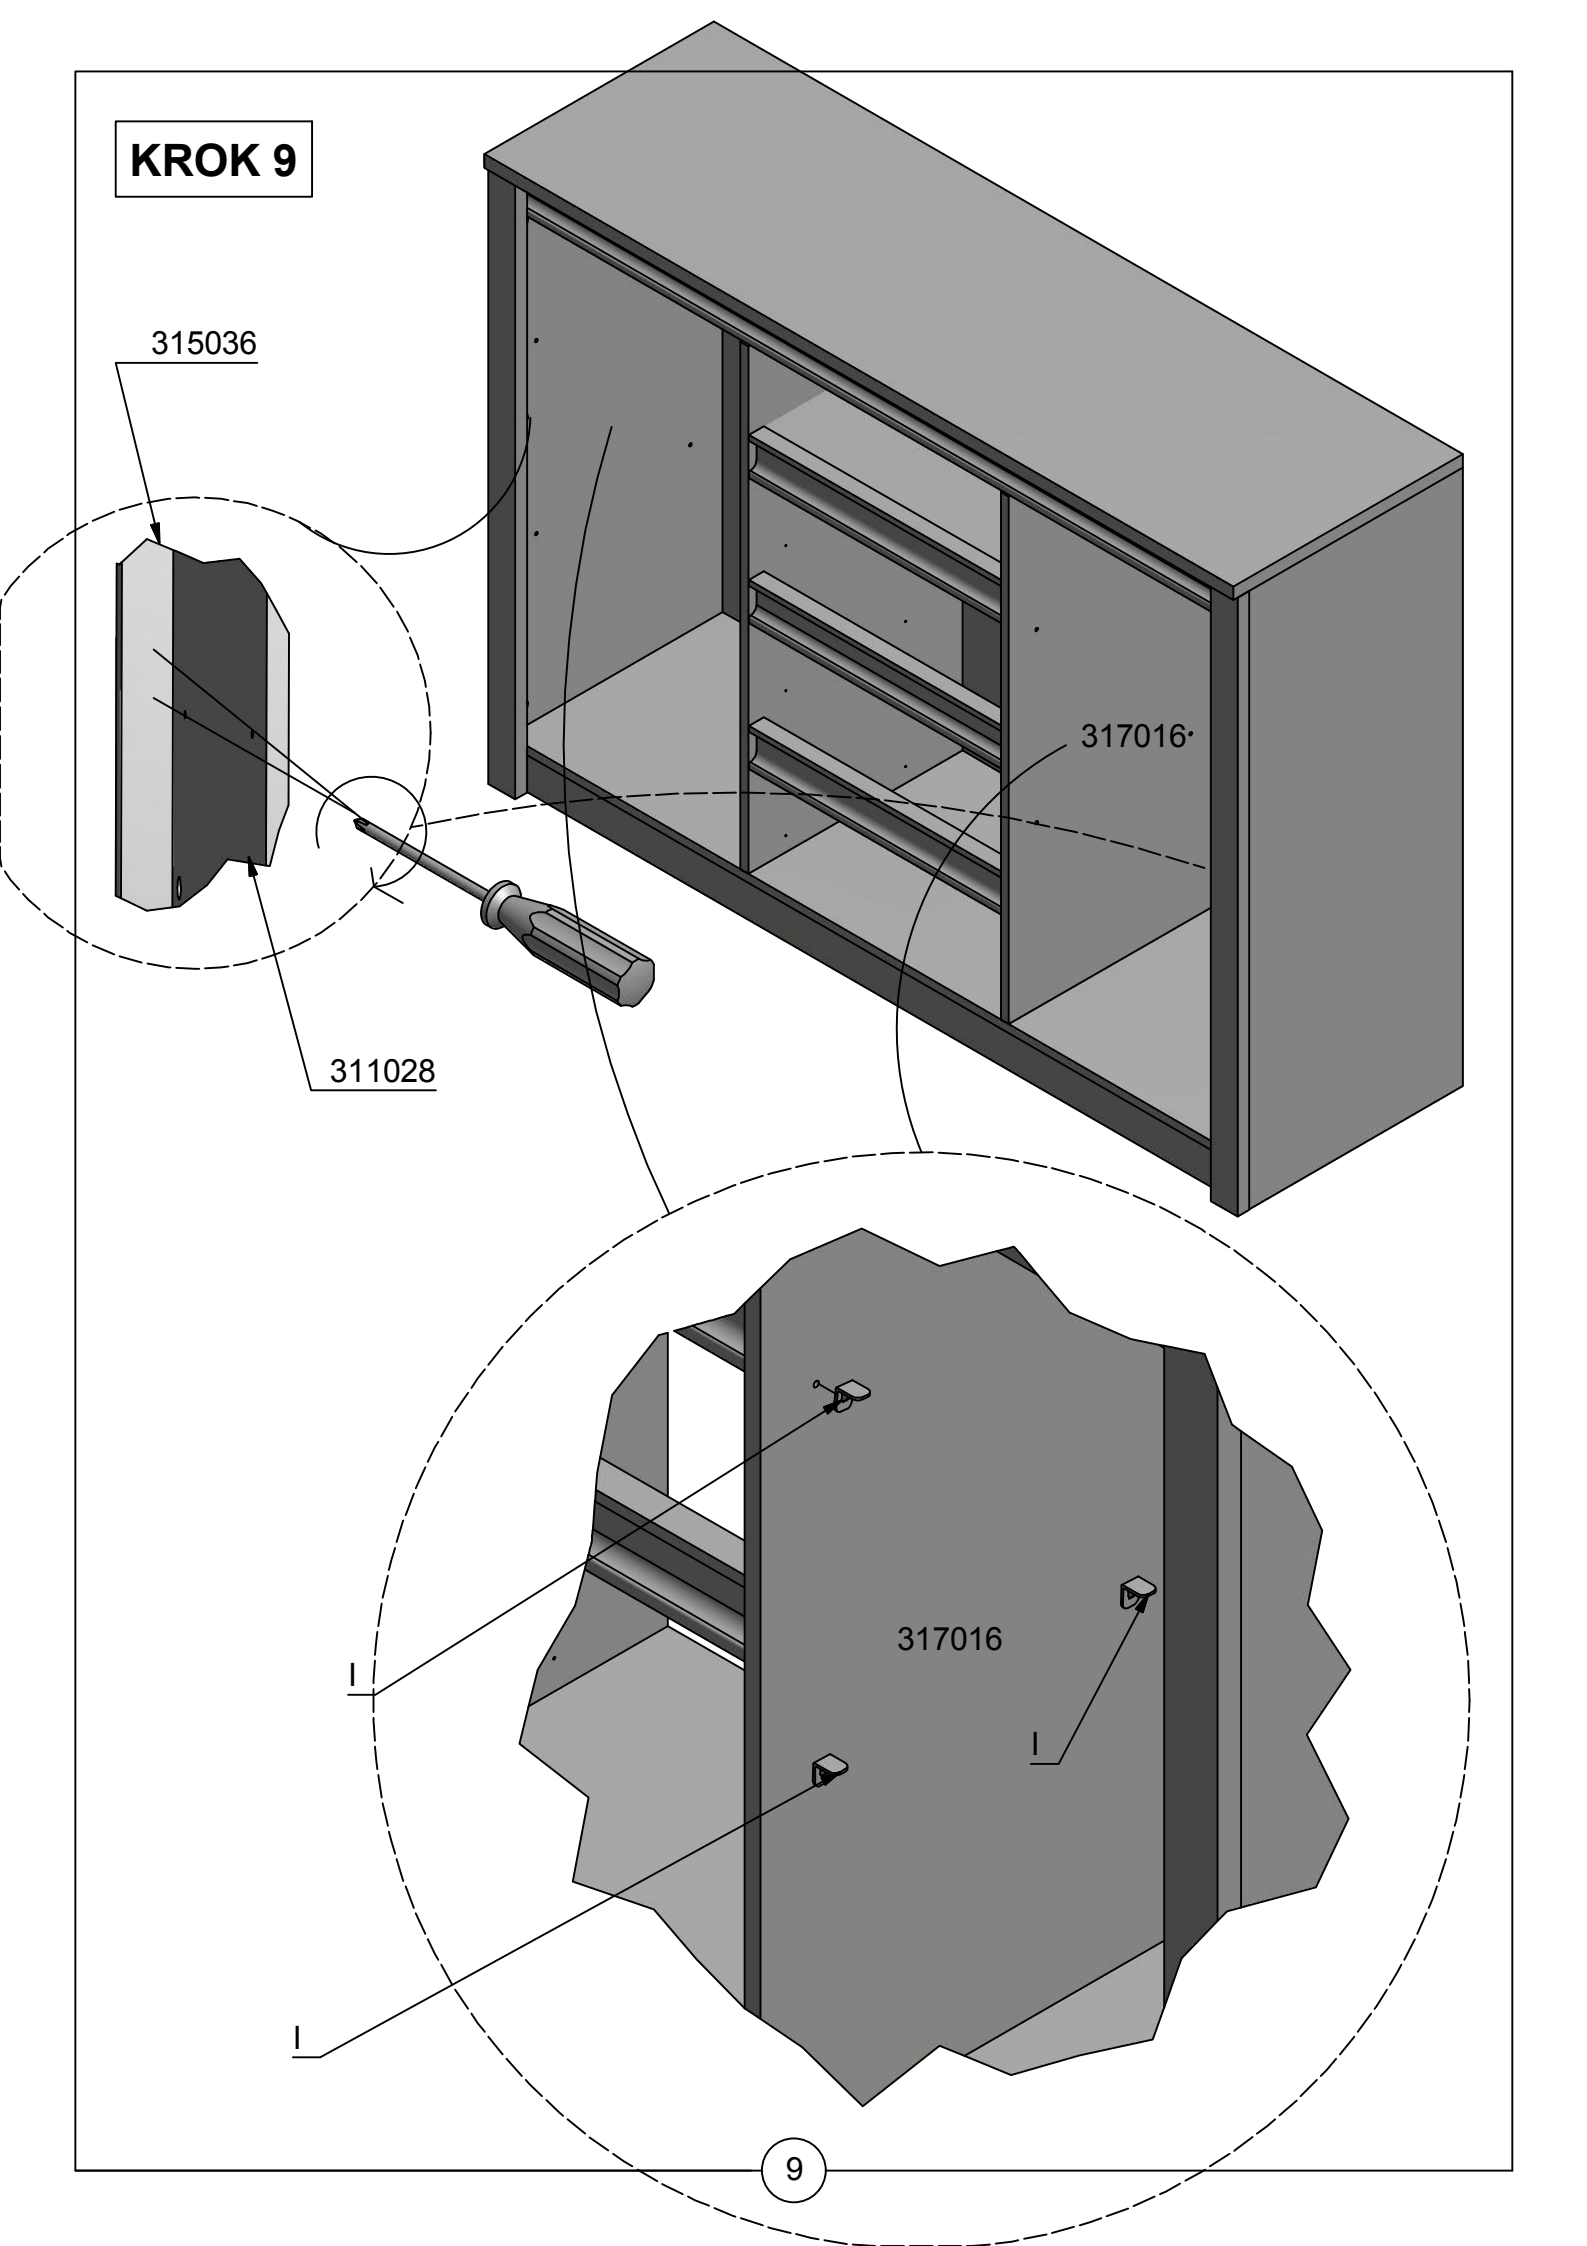


KROK 10


DLA FRONTU PEŁNEGO :
314022

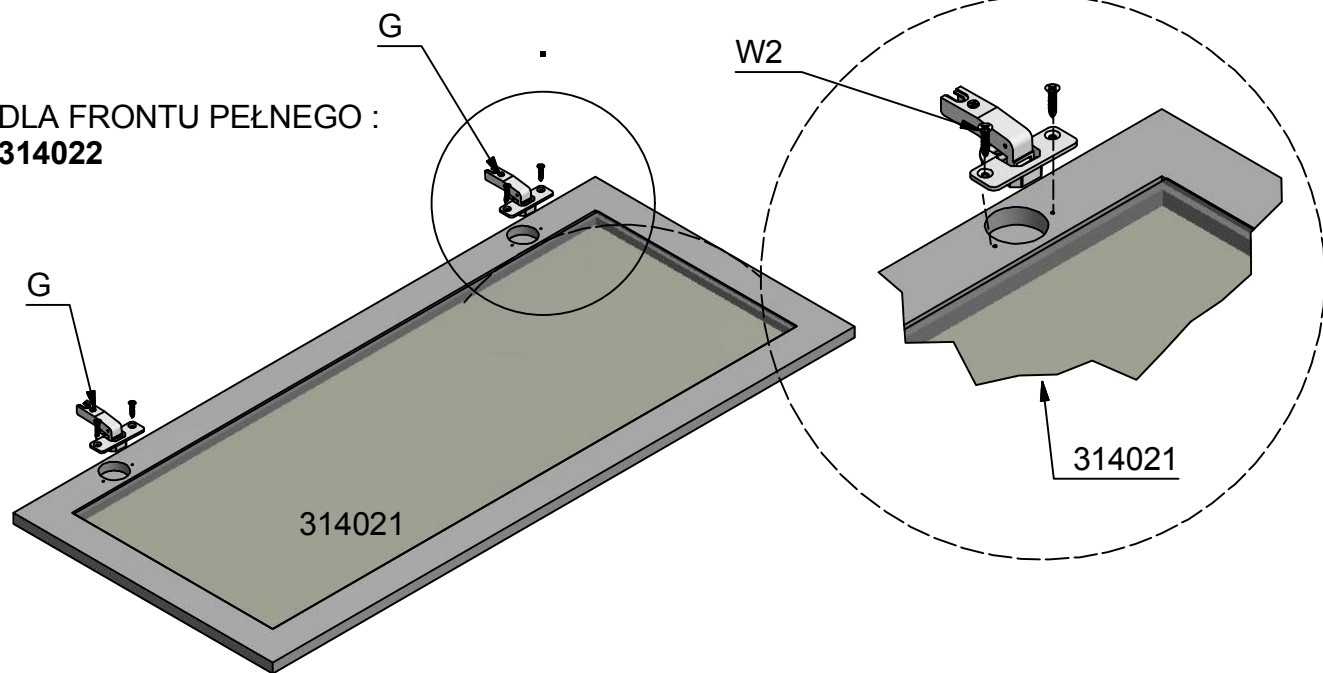

KROK 11

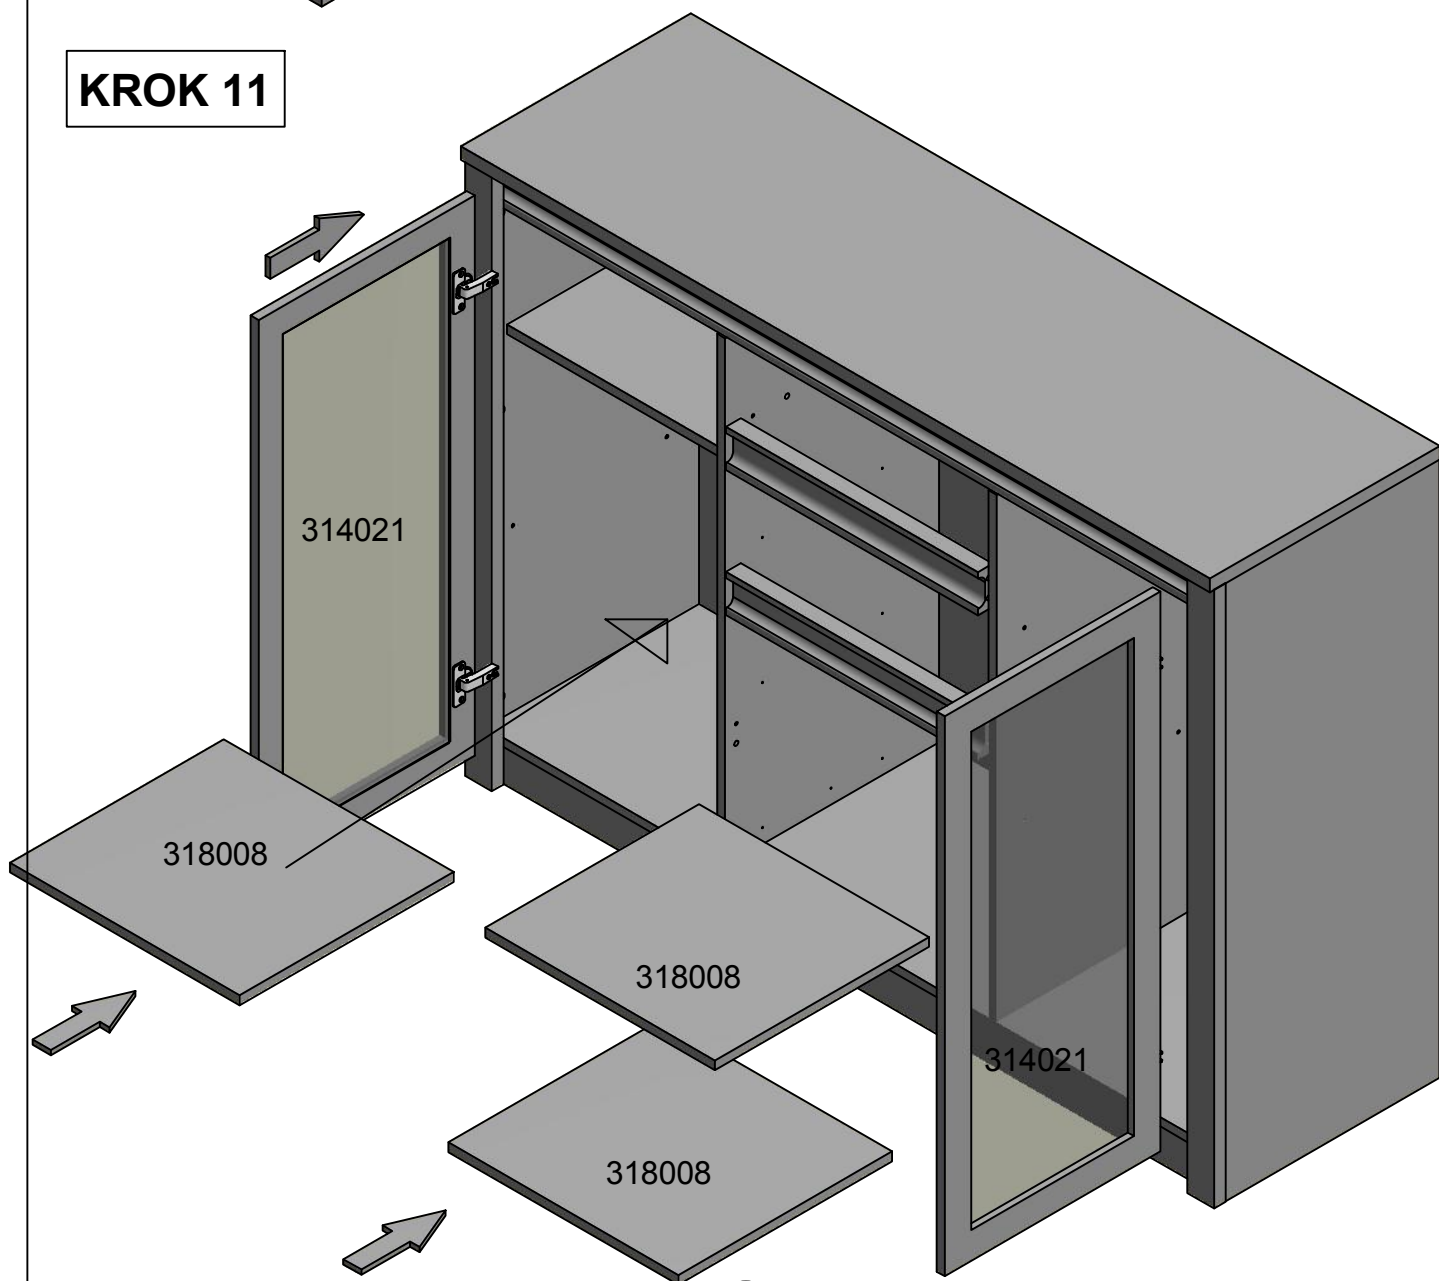

KROK 12

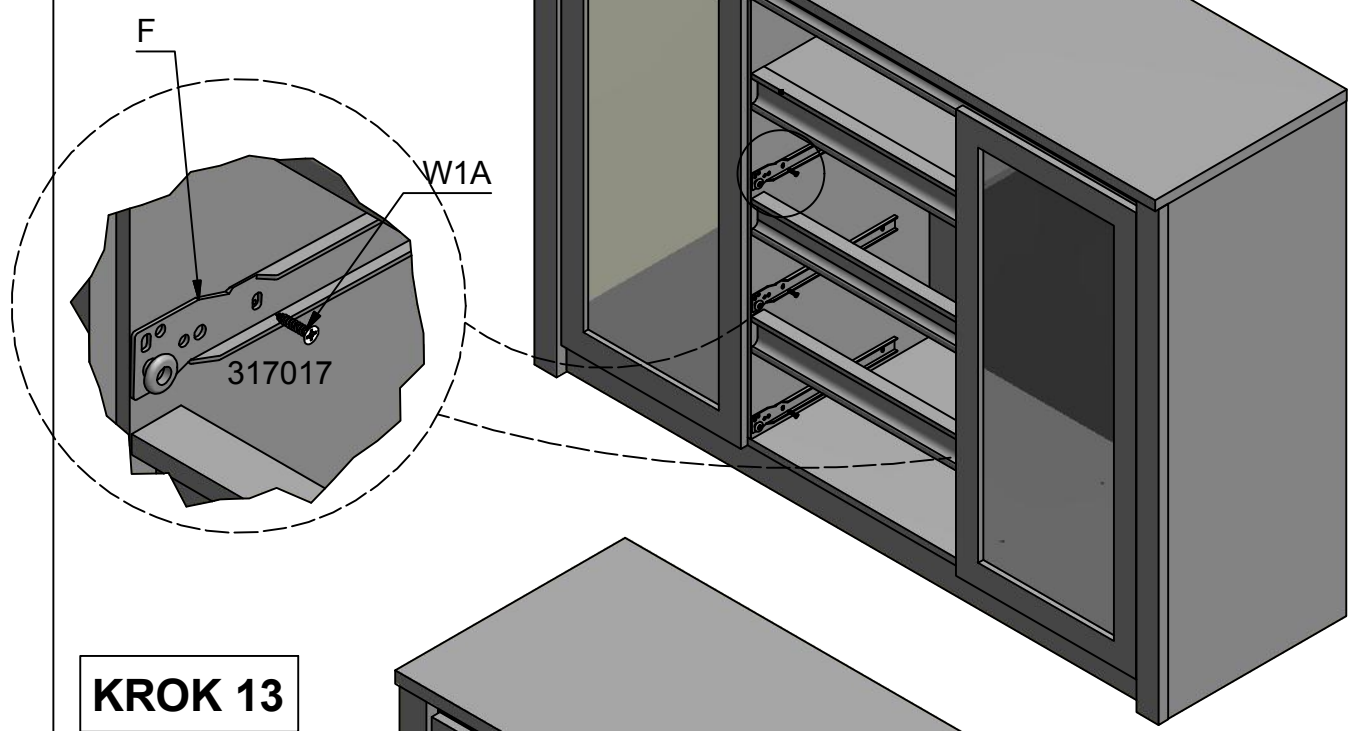

KROK 13

