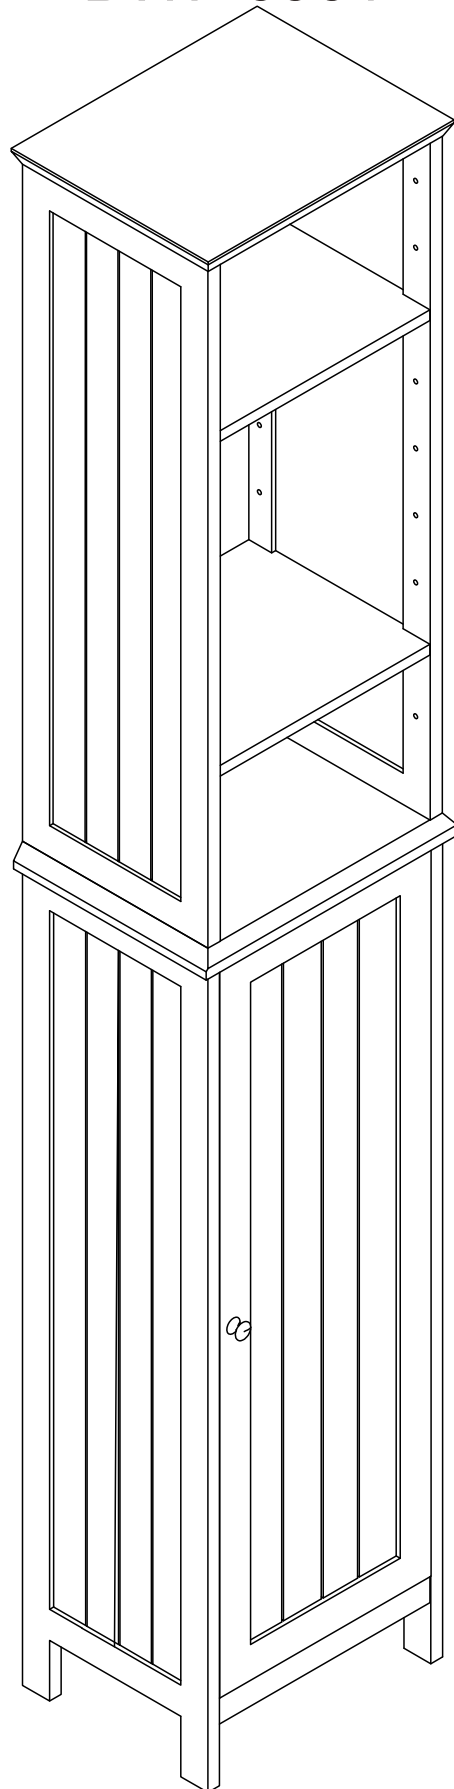















ATENE TYP1

BWF 0901
















Montážný návod


Súčiastky

1x18 	2x6 	3x6 	4x1  4X16mm
5x12  3X12mm	6x5  4X35mm	7x1 	8x1 
9x1  4X25mm	10x2 	11x16 	12x4 
13x1 			

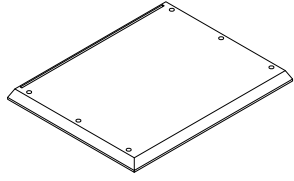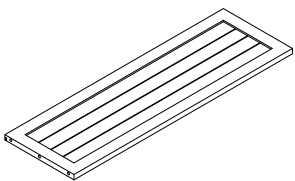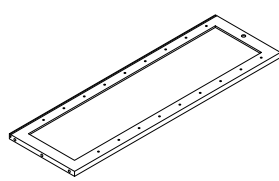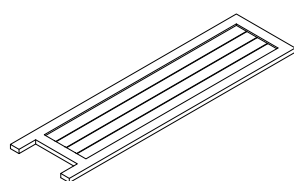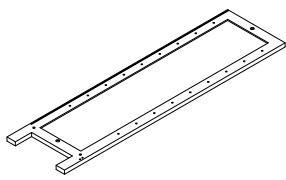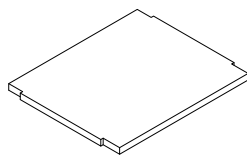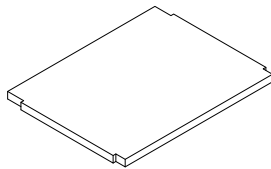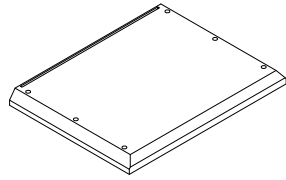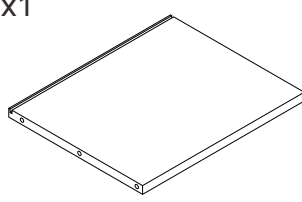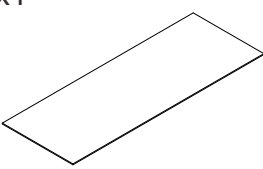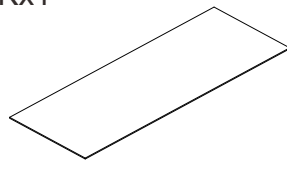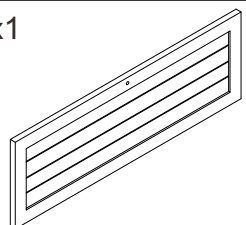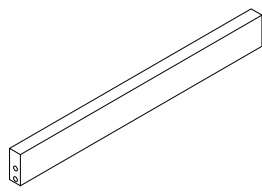
Časti

Ax1 	Bx1 	Cx4 	Dx1 
Ex1 	Fx2 	Gx2 	Hx1 
Ix1 	Jx1 	Kx1 	Lx1 
Mx1 			

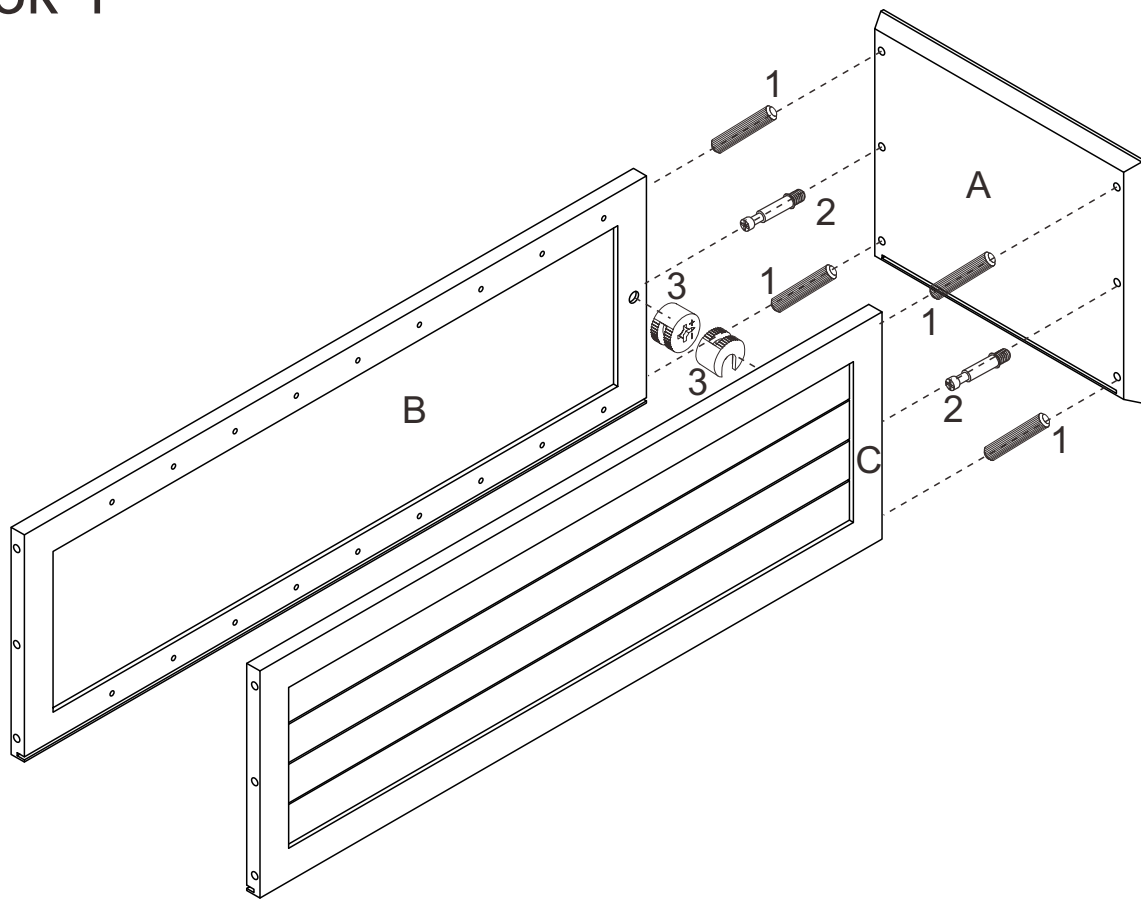
Krok 1




Krok 2

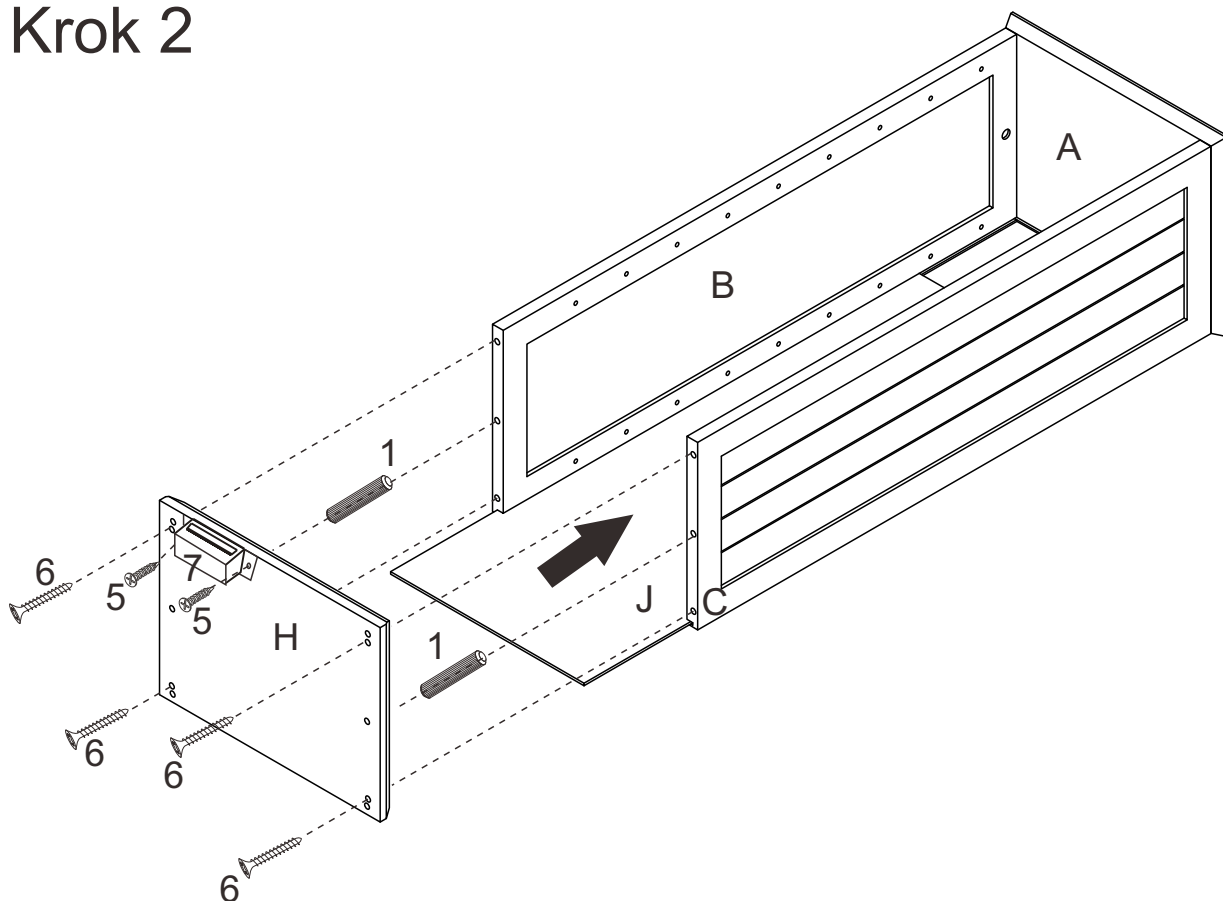


Krok 4

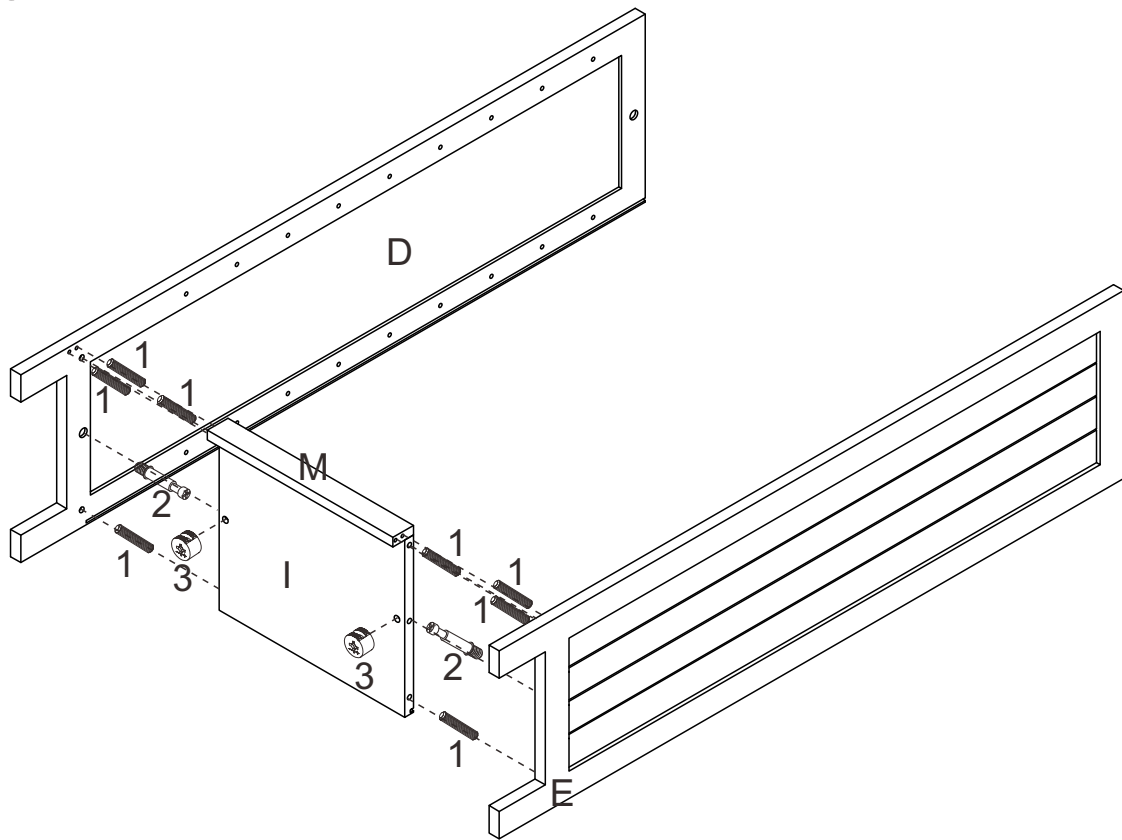


Krok 4

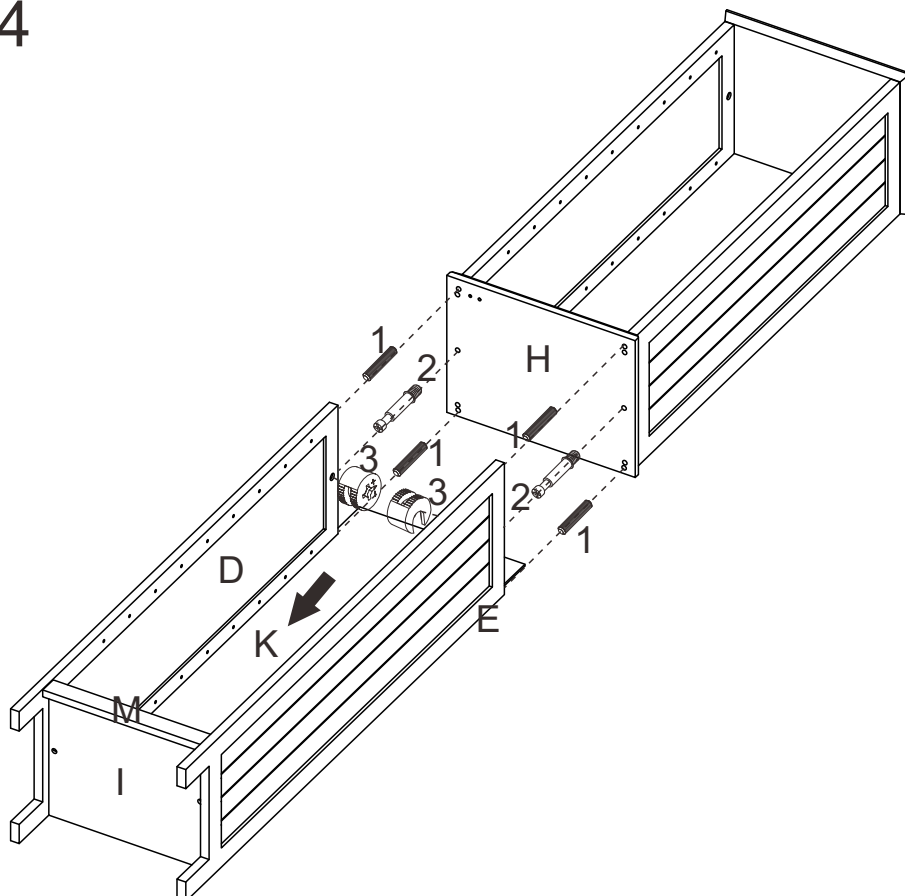

Krok 5

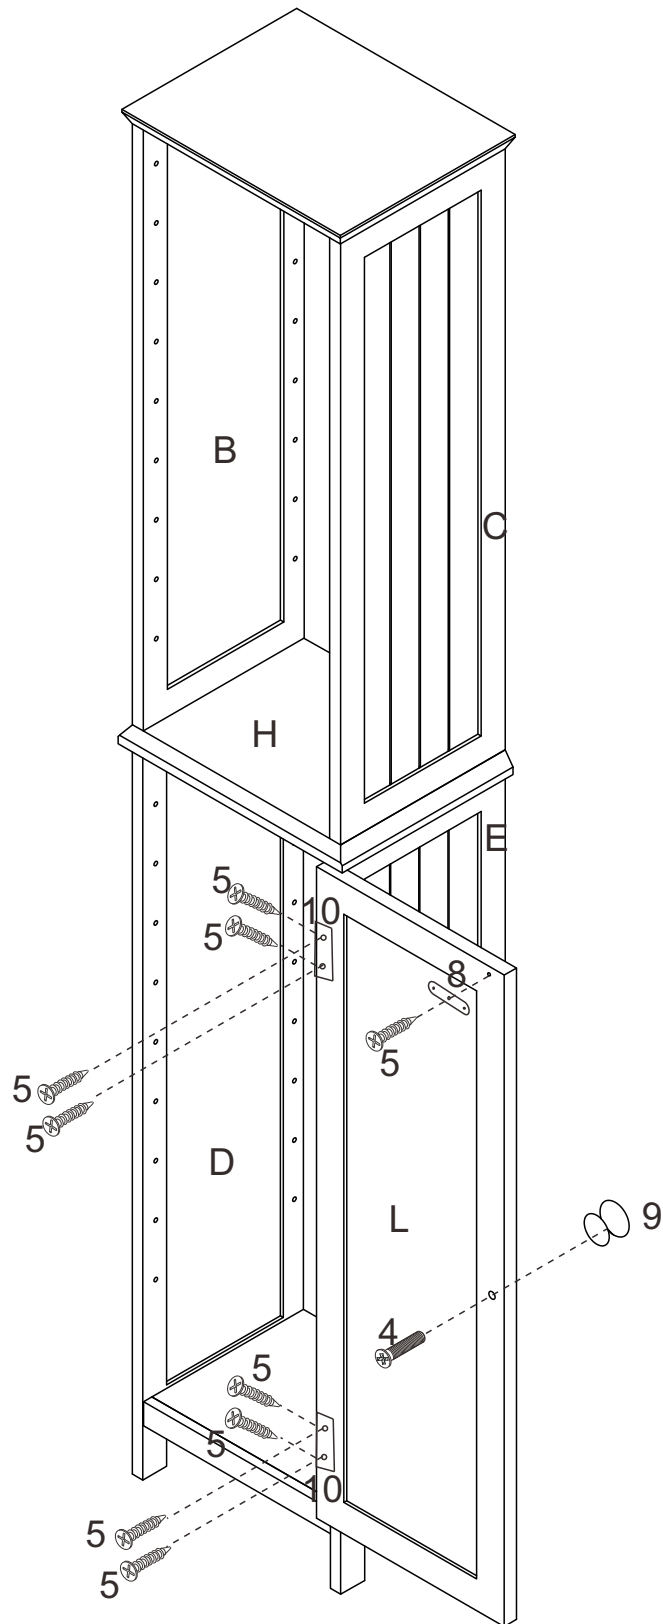

Krok 6

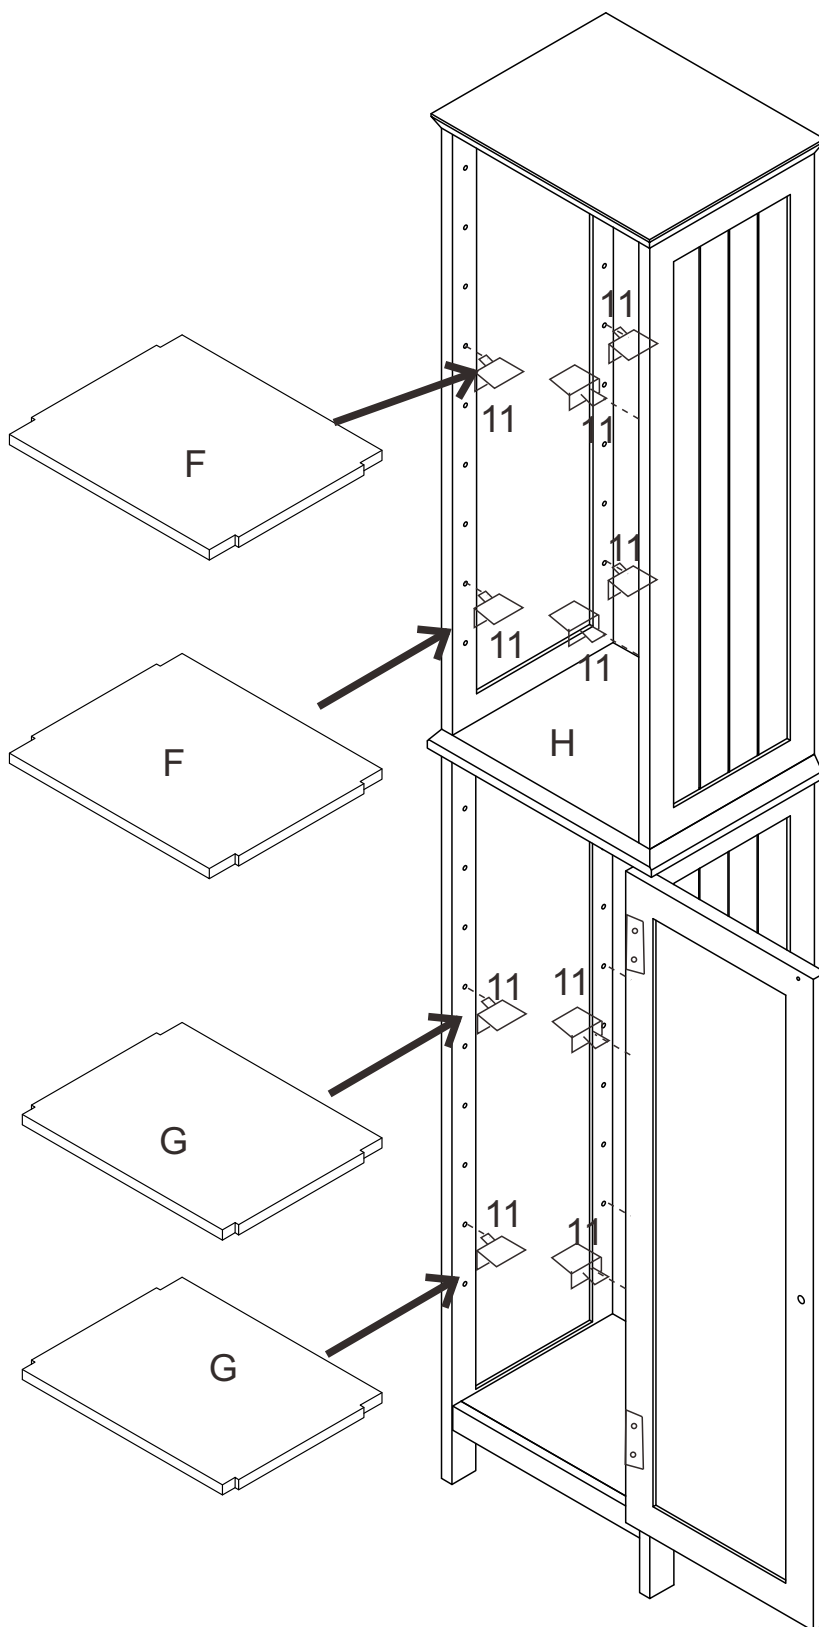

Krok 7

